
# **Instructions for Operating Domestic Domestic Air source heat pump**

# I. Button Setting:

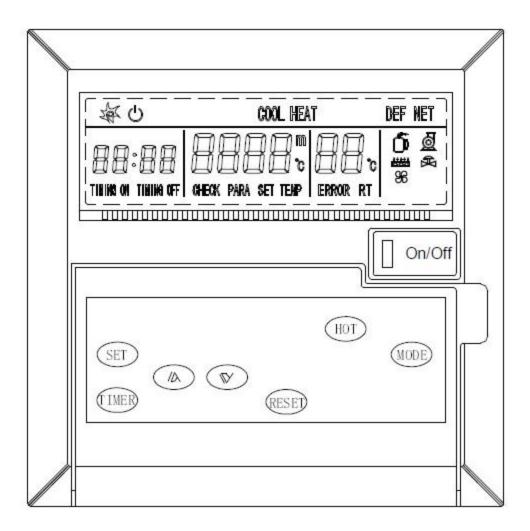

## 1. On/Off Button:

Press this button to switch the controller on or off.

2. Up Button:

Directly press on this button to set temperature higher.

3. Down Button:

Directly press on this button to set temperature lower.

4. Set Button:

Eco Air Pump: 08444 930099

Press and hold this button for 10 seconds until seeing the parameters setting picture, and then set parameters with Up/Down Button.

Press this button once for checking functional status (0: Outflow Water Temperature; 1: Ambient Temperature; 2: Coil Temperature)

### 5. Timer Button:

Press this button once for main unit timer on/off setting:

When the timer on hour digit is flashing, press Up/Down button to set the timer on hour;

Press this button again, and when the timer on minute digit is flashing, press Up/Down button to adjust the timer on minute;

Press this button again, and when the timer off hour digit is flashing, press Up/Down button to adjust the timer off hour;

Press this button again, and when the timer off minute digit is flashing, press Up/Down button to adjust the timer off minute;

Press this button again to exit from timer setting.

- \*:Timer on and timer off time is based on the unit's clock time.
- \*:When timer on and timer off time is the same, timer function will be cancelled.
- \*:When timer on and timer off is set to effective, the timer on/off function will be performed every day.

Press and hold this button for 5 seconds until seeing clock adjusting picture, and then use Up/Down button to adjust the current clock time.

#### 6. Hot Button:

Press this button to switch between always electric heating mode and automatic electric heating mode.

### 7. Mode Button:

Press and hold this button for 10 seconds, and the unit will run in always refrigerating mode; press this button again, and the unit will be switched to heating mode.

#### 8. Reset Button:

Press and hold this button for 10 seconds, and the unit will be reset to default settings.